
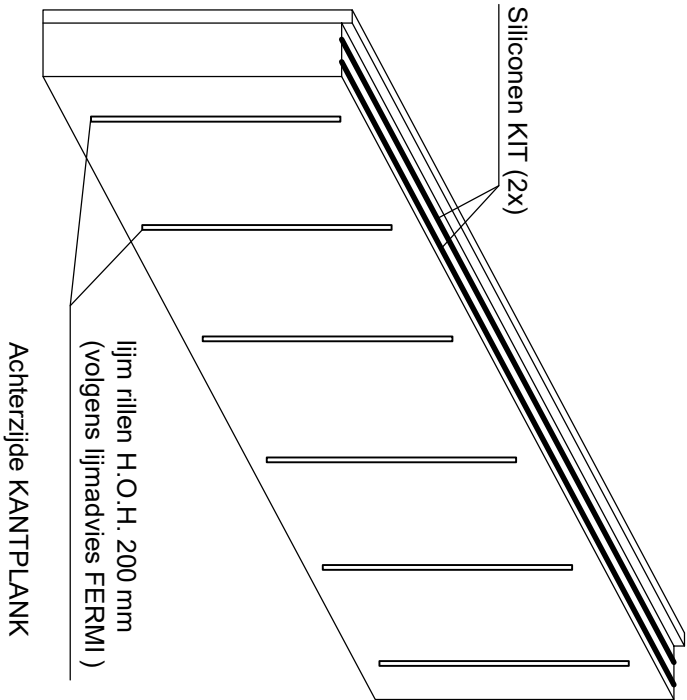


Bij $H \geq 400$ mm en/of
 $L \geq 1400$ mm dient u de
kantplanken tevens
mechanisch te bevestigen

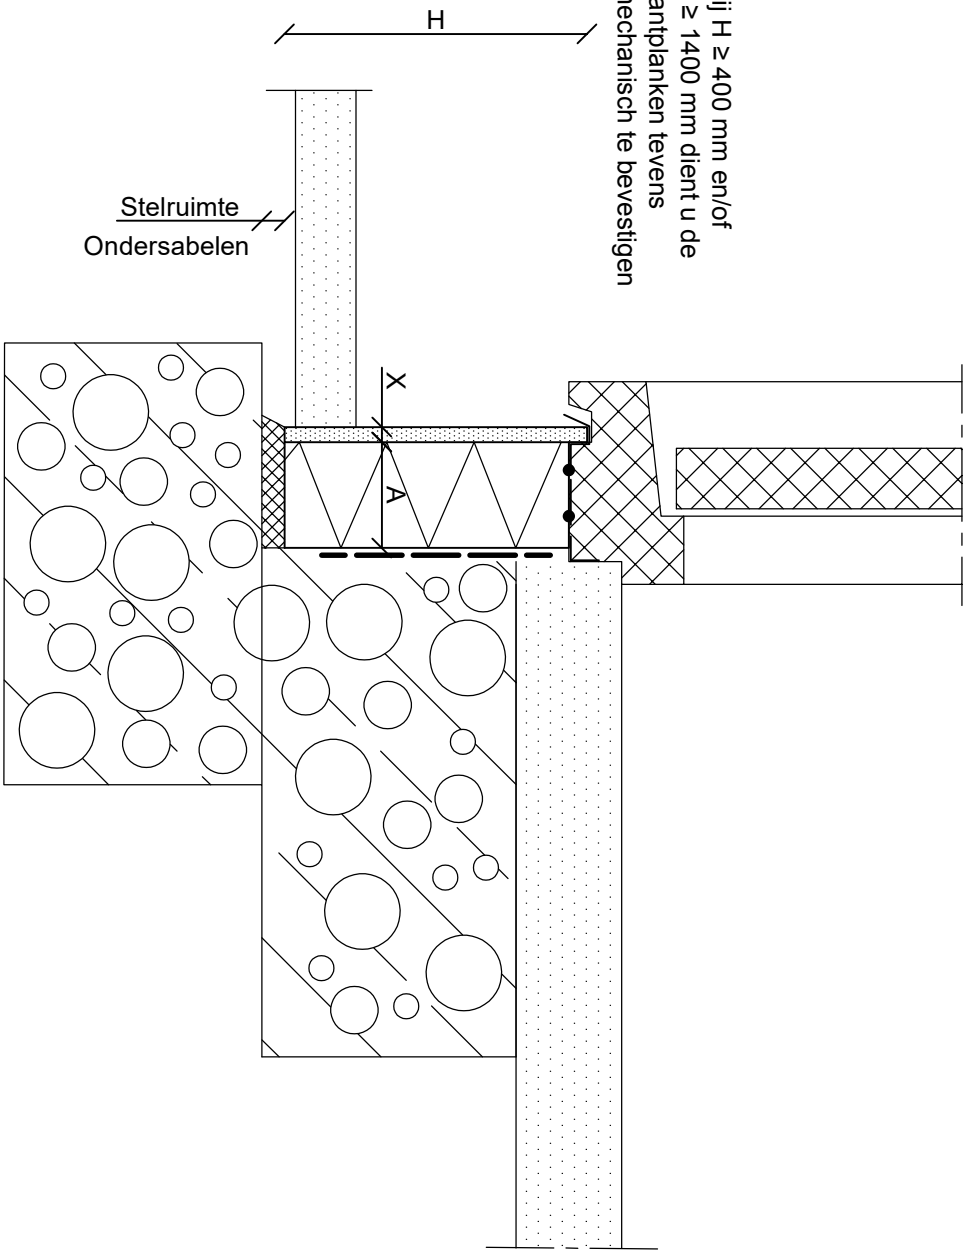

ISOLATIE DIKTE : A = 20 / 30 / 40 / 50 / 60 / 70 / 80 / 100 120 / 140 / 160

HOOGTE : H = 150

H = 200

H = 250

H = 300

H = 350

H = 400

H = 500

H = 600

X (Volgens opgave) = 8 of 10



Fermi Geïsoleerde Kantplank

DETAIL + kozijn + sponning